SOAK SYSTEMS Deep Soak Cleaning System

TANK MAINTENANCE



TO FILL THE TANK

1 – Remove lid and fill the tank with cold water to the marks 6" below the top of the Deep Soak Cleaning System tank.
 Do not use hot water or overfill the tank.

 


 
2 – Add one full bottle of DSC Cleaner Concentrate to the water in the tank. Replace lid.

MONTHLY CLEAN AND REFILL



- 3 Open drain valve and allow the tank to drain into a floor or mop sink drain.
- 4 After draining remove the rack turn tank on its side and rinse the remaining soil into the drain using clean water.





DAILY USE



- 1 Pre-rinse the soiled baking pans, pots, utensils, skewers, filters and other equipement then place them into the tank. Completely cover all items with the solution.
- 2 After soaking is complete Remove the lid, raise the rack and allow the solution to drain into the tank. Remove the cleaned items and drain the solution from each item back into the tank.
- 3 Wash, rinse and sanitize the soaked items before placing back in service.

CAUTION: Contains DSC Cleaner Solution. May cause eye and skin irritations. Avoid contact with eyes,

skin and clothing. Wash thoroughly after handling.

EYES: In case of contact, immediately flush eyes with plenty of water. Remove contact lenses, if worn. Contact a physician if irritation persists.

SKIN: In case of contact, immediately flush skin with plenty of water. Remove contaminated clothing and shoes. Contact a physician if irritation occurs.

INGESTION: If large quantities of solution are swollowed, contact a physician immediately. Do NOT induce vomiting unless directed to do so by a physician. Never give anything by mouth to an unconscious person.

DO NOT ADD ANY CHEMICALS TO THIS SOLUTION. KEEP OUT OF REACH OF CHILDREN.

