


LOW VOLUME BOX Installation Instructions

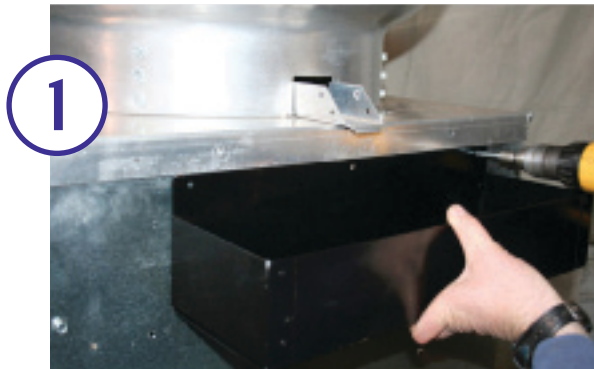

1. Fasten the box with the provided self-tapping screws.



3. Place the pillow in the box, tucking in the corners.



2. Remove the pillow from the bag. Unfold it and even out the spag.



TOOLS NEEDED:

1. Cordless power drill
2. 3/8" hex bit