

GREASE TRAP PVC Adapter

Installation Instructions



1. Use the **PVC drain adapter** with this style fan.



2. Slide the drain adapter over drain tube.



3. Tighten the clamp.



4. Insure the bucket hose clamp is in place and slide the bucket hose on the PVC fitting.



5. Tighten all clamps.



6. Remove the wrap from the container exposing 16 water drain holes.




7. Remove the plastic from the lid hole.



8. Measure and cut the hose allowing 2-3 inches extra for inside of the pail.



9. Place the hose inside of the pail.

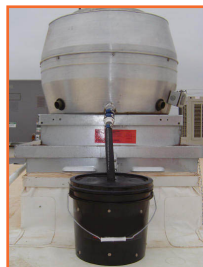

10. All done.