


# Grease Filter Bracket Mounting Instructions

## Heavy Duty Kason Hood Filters

Position **mounting bracket** in approximate position as shown in the diagram below. The center hole in the mounting bracket should align with the midpoint of the edge of the grease filter.

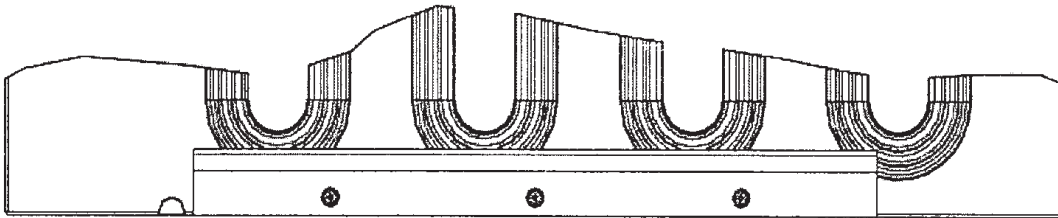

Mark the holes. Drill holes with 0.136 diameter (#29) drill.

Install rivet through hole in mounting bracket and grease filter, then secure.

Check rivet installation to ensure that the bracket is tight.

